


# Installation diagram

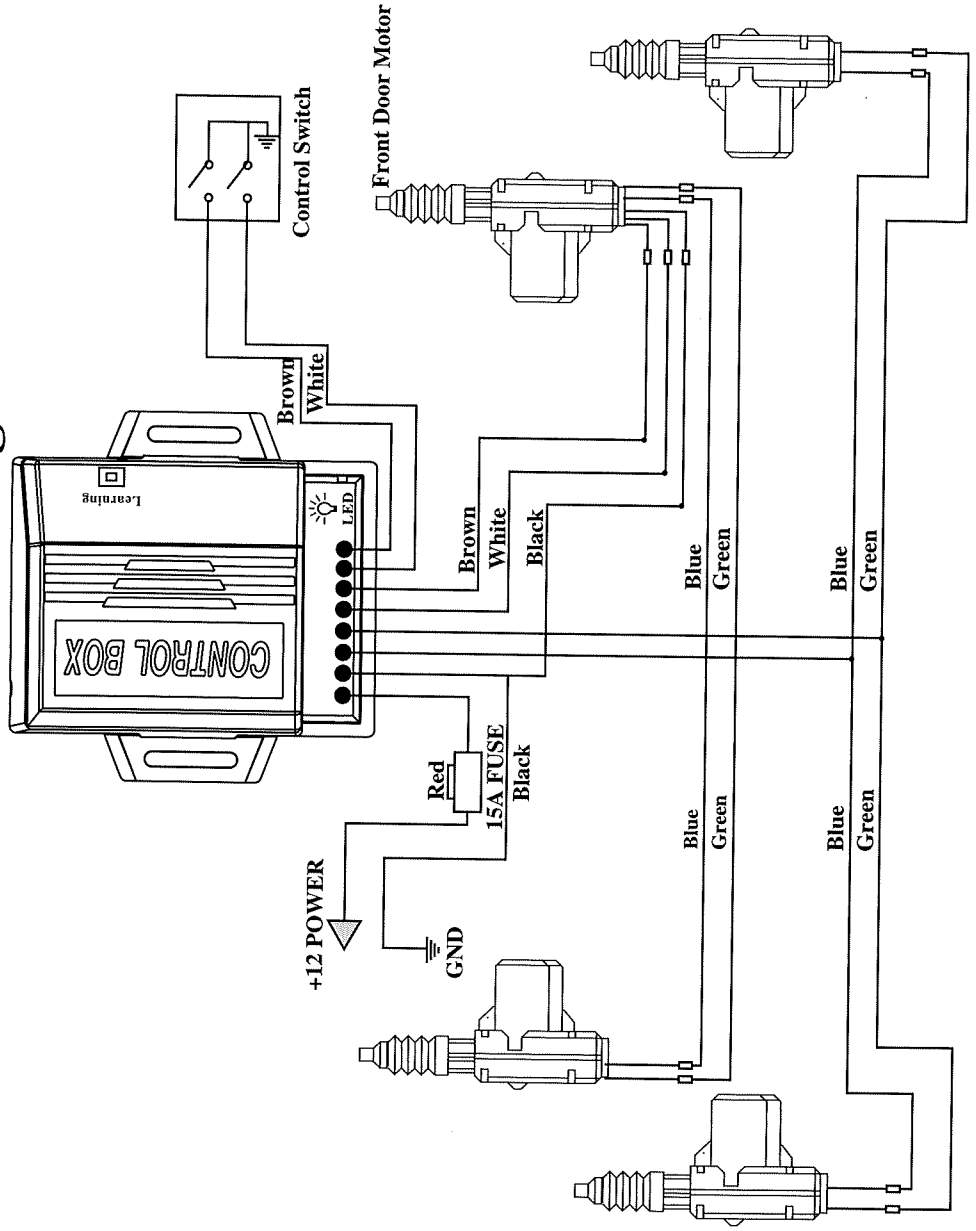


# Remote central door locking system

## User manual



**Note:** the button icons could be different for different remote transmitters type, above button icons, refer to the actual transmitter type.

### Unlock:

Press the button  on the transmitter once, the central door locking system would unlock automatically.

### Lock

Press the button  on the transmitter once, the central door locking system would lock automatically.

### Code Learning

Keep pressing the “Learning” switch in the brain unit for at least 1 second, then LED indicator will be ON for 15 seconds, the system enters into learning code status, press any button on the transmitter once, the LED indicator will be OFF, that means you finished the first transmitter code learning. Repeat the above operations, you can learn max.4 transmitters. When four transmitters had been finished code learning, the old code would be covered.

### Lock / Unlock by hand.

Touch by hand the switch of the central door locking system to lock or unlock.

### Technical Data:

**Working Voltage:**  $12 \pm 3V$

**Static current:**  $\leq 8mA$

**Working temperature:**  $-40^{\circ}C \sim +85^{\circ}C$